




7. วิธีปรับตั้ง

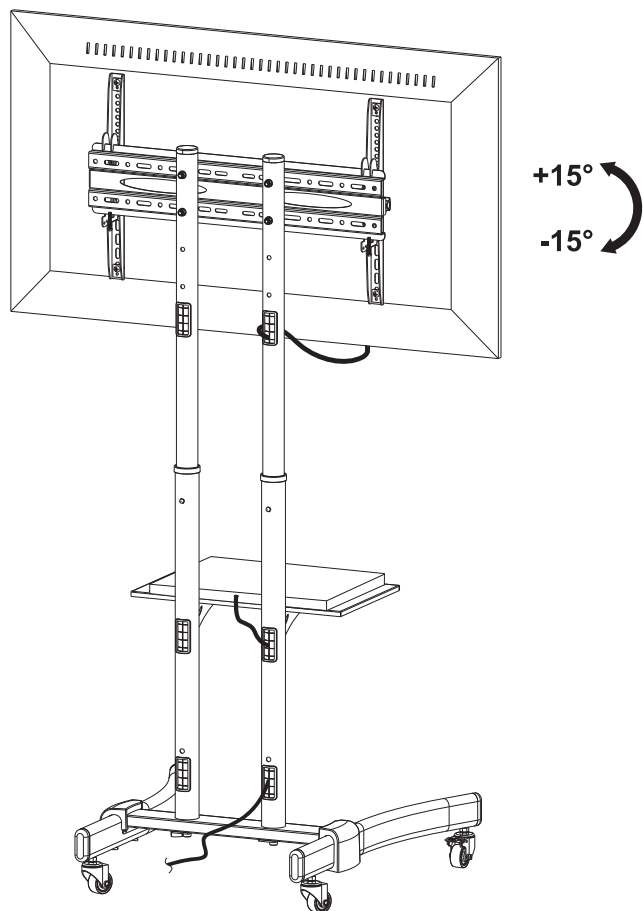

คุณสามารถปรับเอียงหน้าจอทีวีได้ตามองศาที่ต้องการ
หากหน้าจอไม่อยู่ในตำแหน่งที่ล็อกไว้ (เอียงแล้วไม่อยู่กับที่) ให้คลายหรือขันลูกบิดให้แน่นขึ้น
เพื่อปรับระดับหน้าจอทีวีให้ได้องศาตามที่ต้องการ


วิธีดูแลรักษา

- ควรตรวจสอบให้แน่ใจว่าขาแขวนยังแข็งแรงและปลอดภัยต่อการใช้งานอย่างสม่ำเสมอ (แนะนำอย่างน้อยทุก ๆ 3 เดือน)
- หากมีข้อสงสัย โปรดติดต่อ ผู้จัดการฝ่ายหรือร้านค้าที่ท่านซื้อสินค้า



คู่มือการติดตั้ง

ขาแขวนทีวีตั้งพื้น

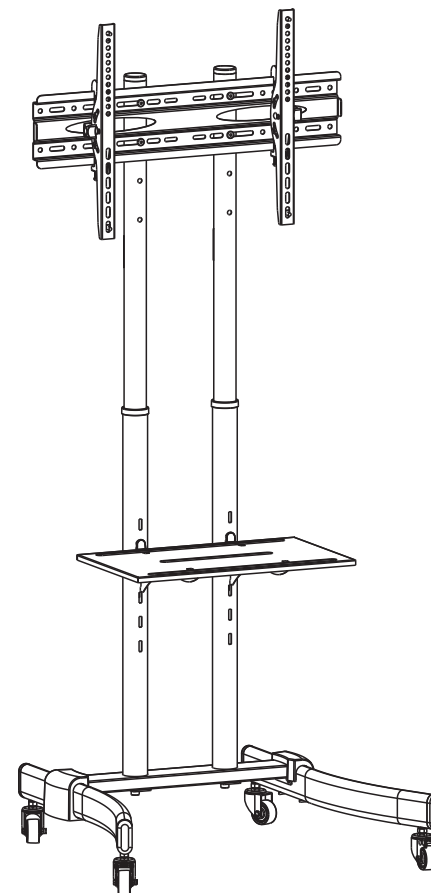

ข้อควรระวัง ห้ามใช้งานเกินน้ำหนัก
ที่ระบุไว้ หากฝ่าฝืนอาจทำให้เกิดการบาดเจ็บ
ร้ายแรงหรือความเสียหายต่อทรัพย์สินได้

MT-F1700



ขนาด VESA ที่รองรับ
200x200
300x300
400x200
400x400
600x400





NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING


- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist


IMPORTANT: Ensure you have received all parts against the component checklist prior to installation. If any parts are missing or faulty, telephone the special franchiser for a replacement.

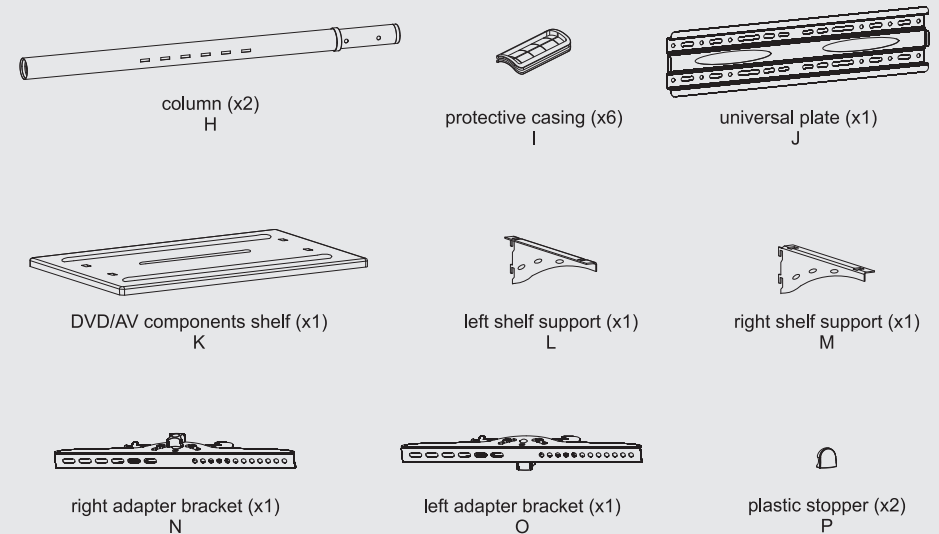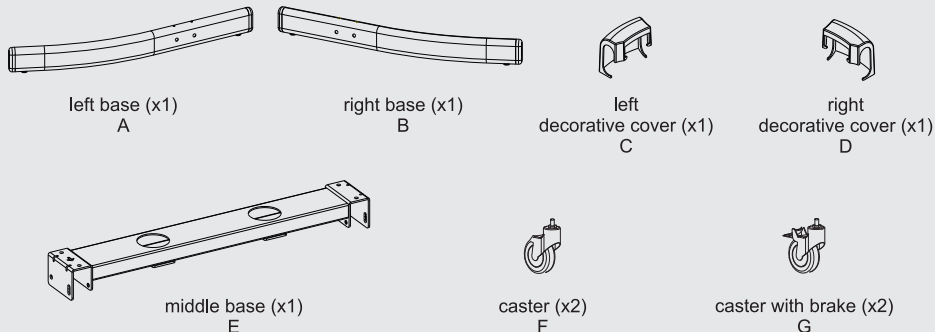


Package M

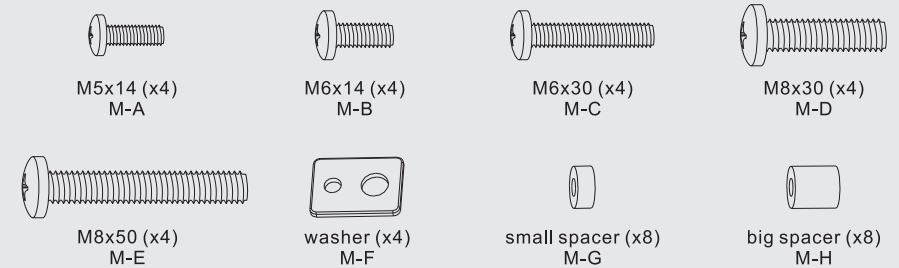


Package

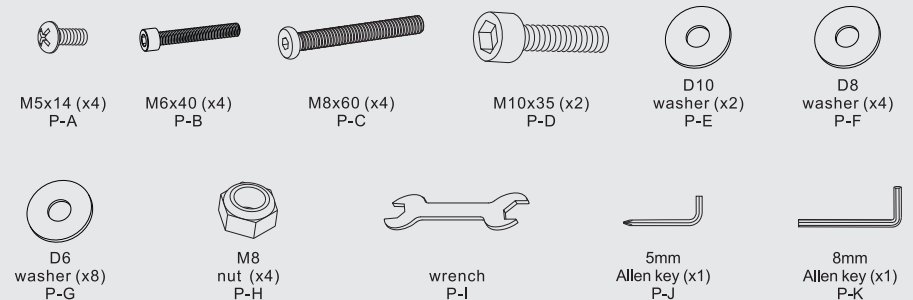



1.Assembling the Base

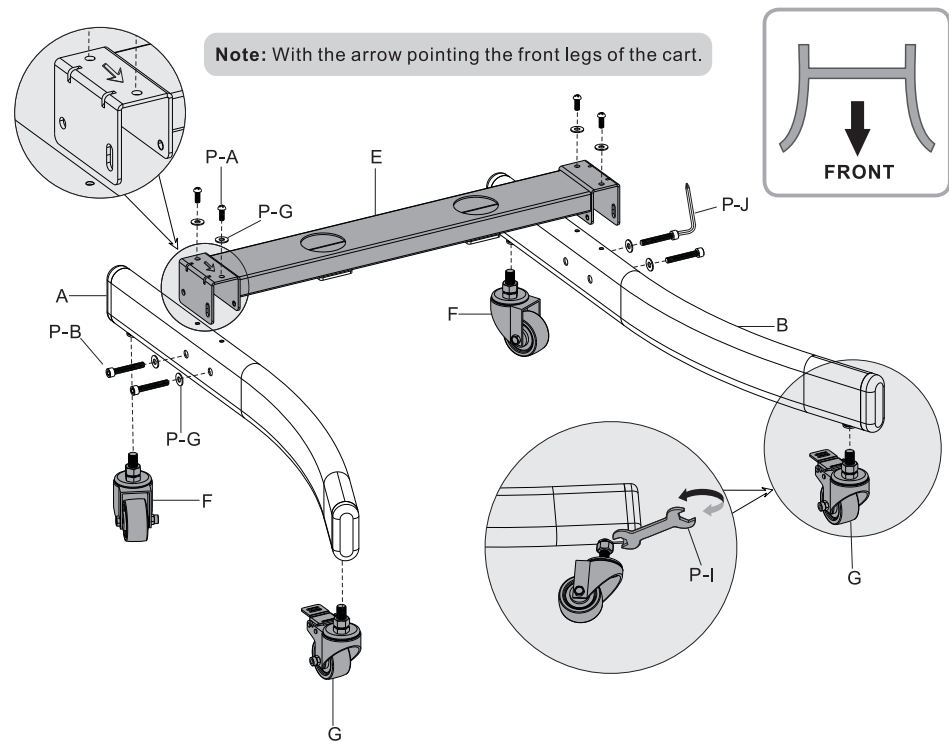


- Use the appropriate screws and washers to connect the left and right base to the middle base.
 - Insert the casters into the holes and tighten the casters to secure.
- Note:** Make sure all casters are at the same height. Each caster can be adjusted independently for fine tuning. Slightly turn the nut to lower or raise the base.
- Note:** Lock the brakes on the casters to avoid any sudden movements during installation.
- ⚠ Tighten all screws but do not over tighten.**

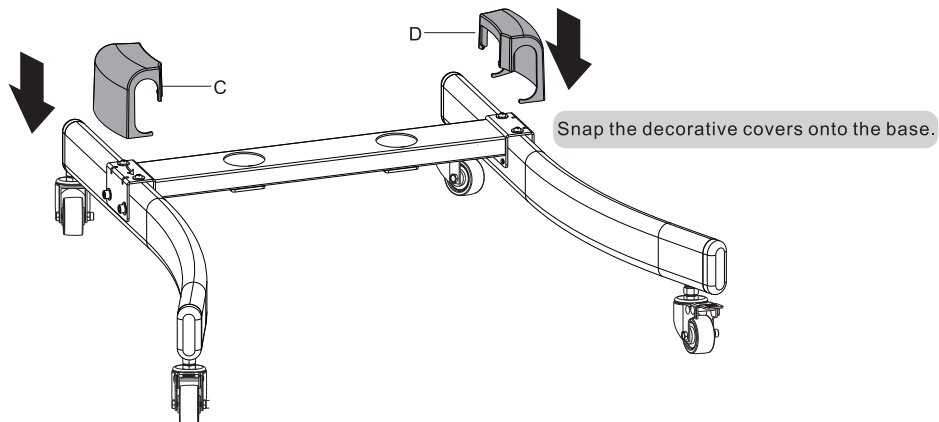


2.Installing the columns

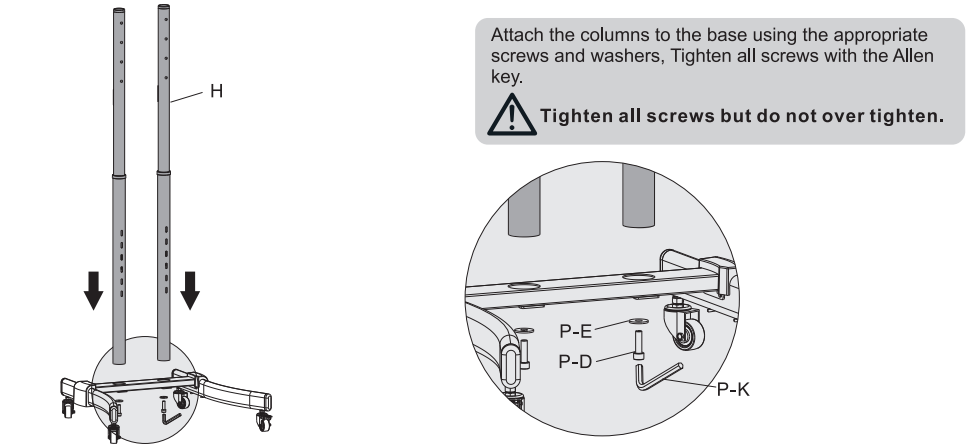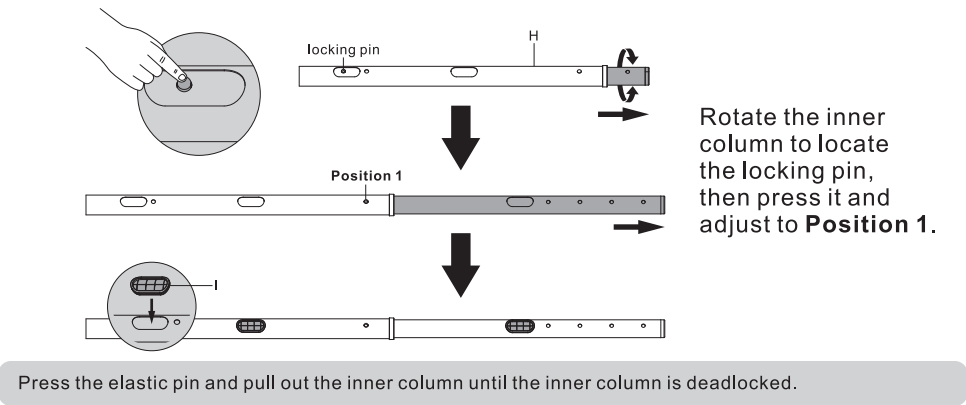

3.Installing the Universal Plate

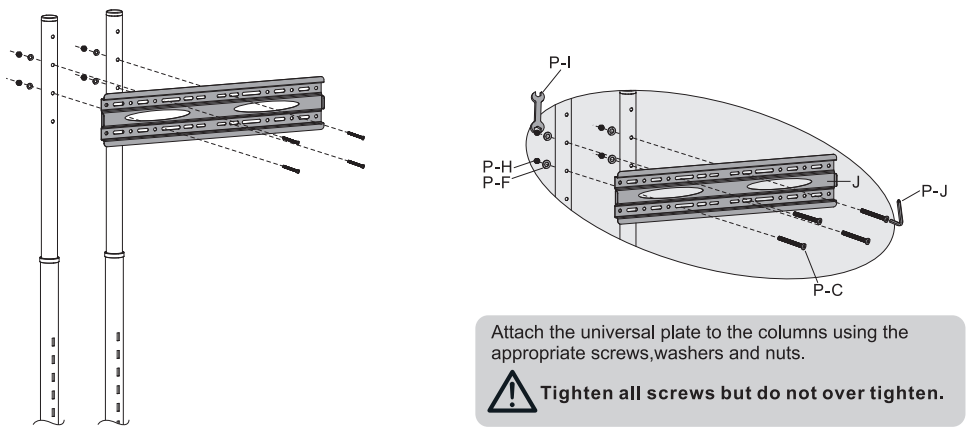


4. Installing the DVD/AV Components Shelf

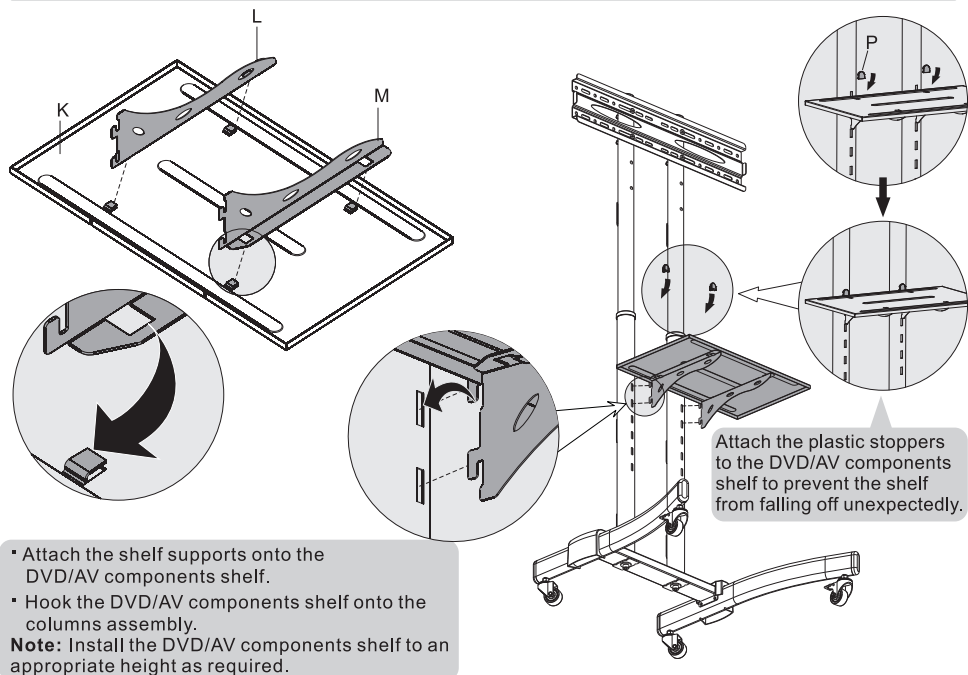


5. Installing the Adapter Brackets

5-1. For Flat Back Screens

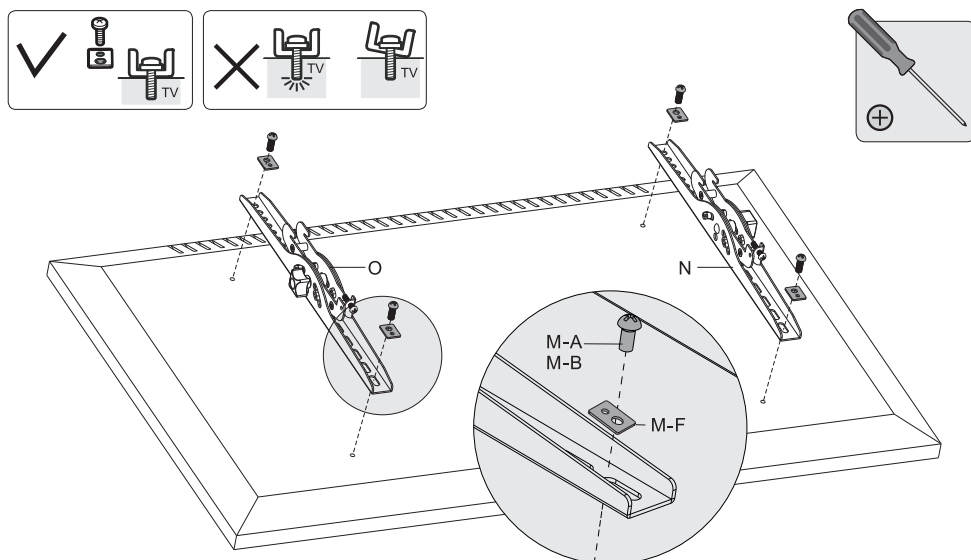

5-2. For Bump-out or Recessed Back Screens

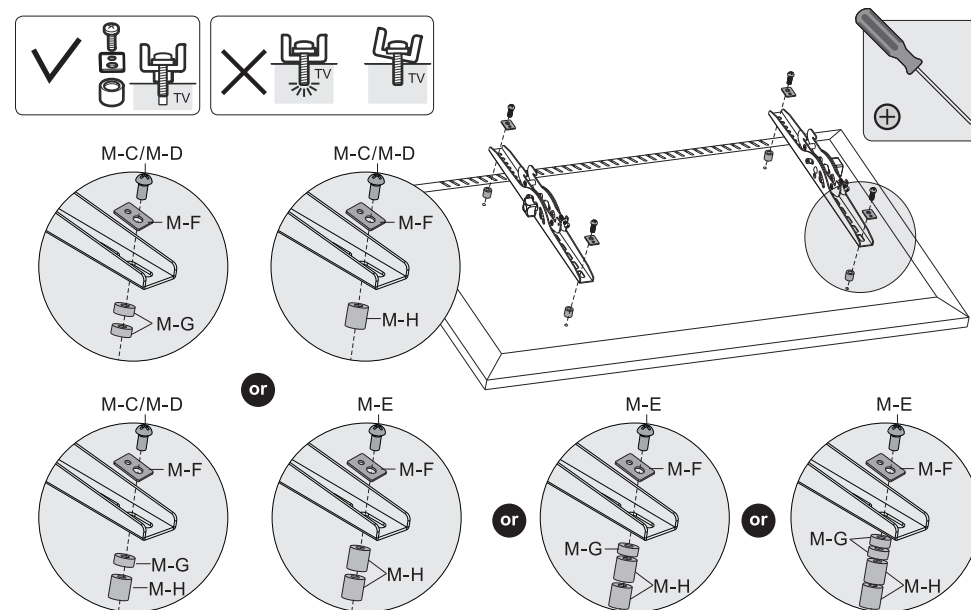

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screens.
 ▪ Position the adapter brackets as close as possible to the center of the TV.
 ▪ Screw the adapter brackets onto the TV.

6. Hanging the TV onto the Universal Plate

