
NEXIS

SP-1100 Conference Camera

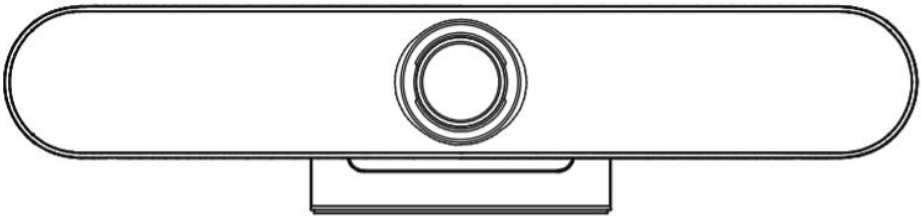

User Guide
English (V1.0)

Table of content

1 Packing List 1
2 Quick Start 1
3 About SP-1100 2
3.1 Interfaces and Buttons 2
3.2 Dimension 2
3.3 Remote Control 3
4 GUI Settings 4
4.1 MENU 4
4.2 SETTING 4
4.3 INFORMATION 4
4.4 RESTORE DEFAULT 4


1 Packing List

Open the box, you will find below items:

Name	Quantity
NEXIS SP-1100 Conference Camera	1
AC Power Adaptor	1
Power Cable	1
USB Cable	1
Mount Kit	1
Remote Control	1
Quick Installation Guide	1


2 Quick Start

1) Please check below connects first.
2) Connect the power adapter to the power connector on the rear panel of the camera. The power indicator on the front panel of the camera is on.
3) After the camera is powered on, it starts to boot up to the initialization position.

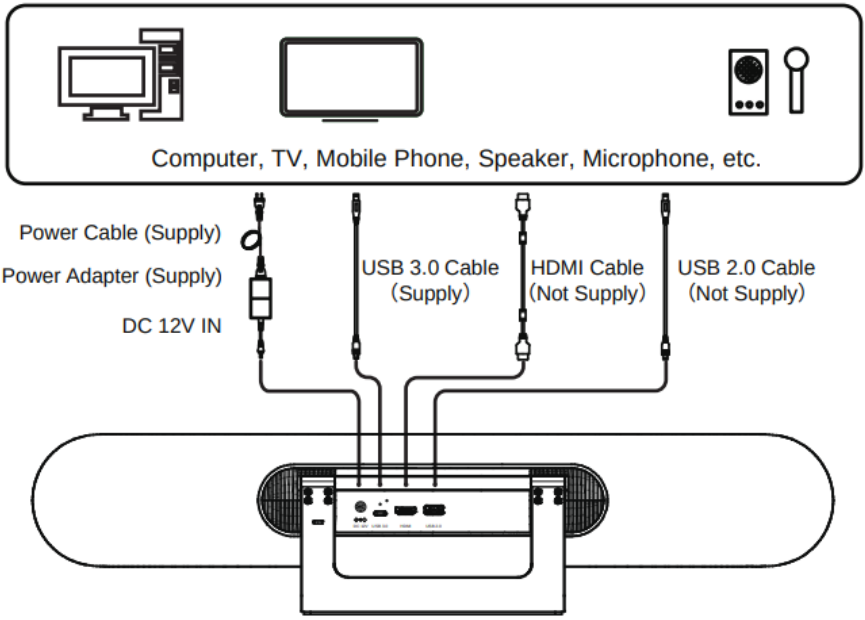


3 About SP-1100

3.1 Interfaces and Buttons

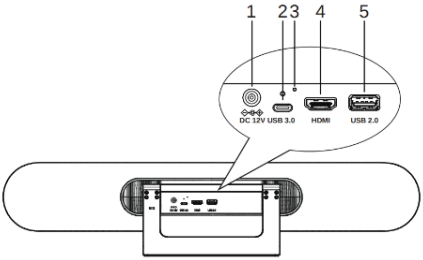


Item	Name
1	Power Switch
2	USB 3.0 Interface
3	Reset button
4	HDMI Interface
5	USB 2.0 Interface

3.2 Dimension

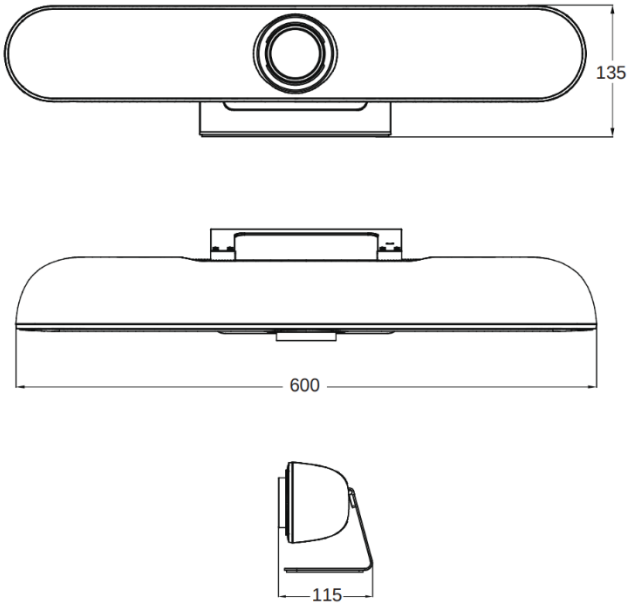

3.3 Remote Control

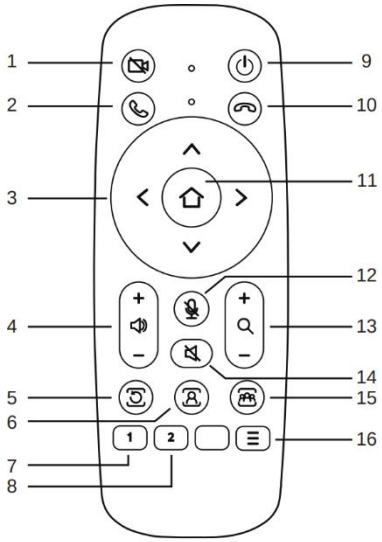


Key Description
1. Camera Blank Key
Press to turn off the camera, press again to resume
2. Call Key
To pick up a call.
3. Camera Direction Keys
Press to move the camera to up, down, left and right; press the [Home] key to return the camera to the middle position
4. Volume +/- Keys
Press to adjust the volume level
5. Exit Tracking key
Press to exit the tracking mode
6. Speaker Tracking Key
Press to enable the voice tracking of the speaker
7. Preset 1 Key
Long press to set preset 1; Short press to call preset 1.
8. Preset 2 Key
Long press to set preset 2; Short press to call preset 2.
9. Standby Key
Long press to turn the camera to standby mode; Short press to resume.
10. Call End Key
Hang up the call
11. Home / OK Key
Go back to home position or confirm the selection
12. Microphone Mute Key
Turn on/off the microphone
13. Zoom Keys
Zoom in / [+]; Zoom out / [-]
14. Speaker Mute Key
Turn on/off the speaker.
15. Participants Tracking Key
Press to enable the participants auto-framing feature.
16. Menu Key
Press to enter or exit the OSD menu

4 GUI Settings


4.1 MENU

Press the [MENU] button to display the main menu on the display, using the arrow button to move the cursor to the item. Press the [HOME] button to enter the corresponding sub-menu.



4.2 SETTING


Move the main menu cursor to [SETTING], and press [HOME] key enter the setting page, as shown in the following figure.

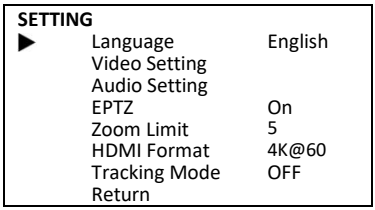

Language: English, Chinese & Francais.
Video Setting: Setting of 2D/NR, 3D/NR, WDR Enable, Flip-H, OSD Mirroring.
Audio Setting: Setting of 3A Enable, Mic Equalizer.
EPTZ: On, Off.
Zoom Limit: 1.5x, 2x, 3x, 4x, 5x.
HDMI Format: 1080P@60, 1080P@50, 1080P@30, 4K@30.
Tracking Mode: Off, Participants, Speaker.
Tracking Effect: Smooth, Instant Switch (Effective only in Tracking Mode).
Tracking Speed: Slow, Normal, Fast (Effective only in Tracking Mode).


4.3 INFORMATION

Move the main menu cursor to [INFORMATION], and press [HOME] key enter the information page, as shown in the following figure.

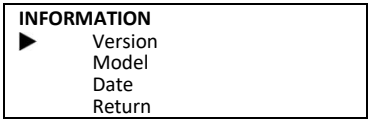

4.4 RESTORE DEFAULT

Move the main menu cursor to [RESTORE DEFAULT], and press [HOME] key enter the restore page, as shown in the following figure.



Yes / No: Confirm or cancel restore factory settings.